


2011 NISSAN JUKE, 1.6L

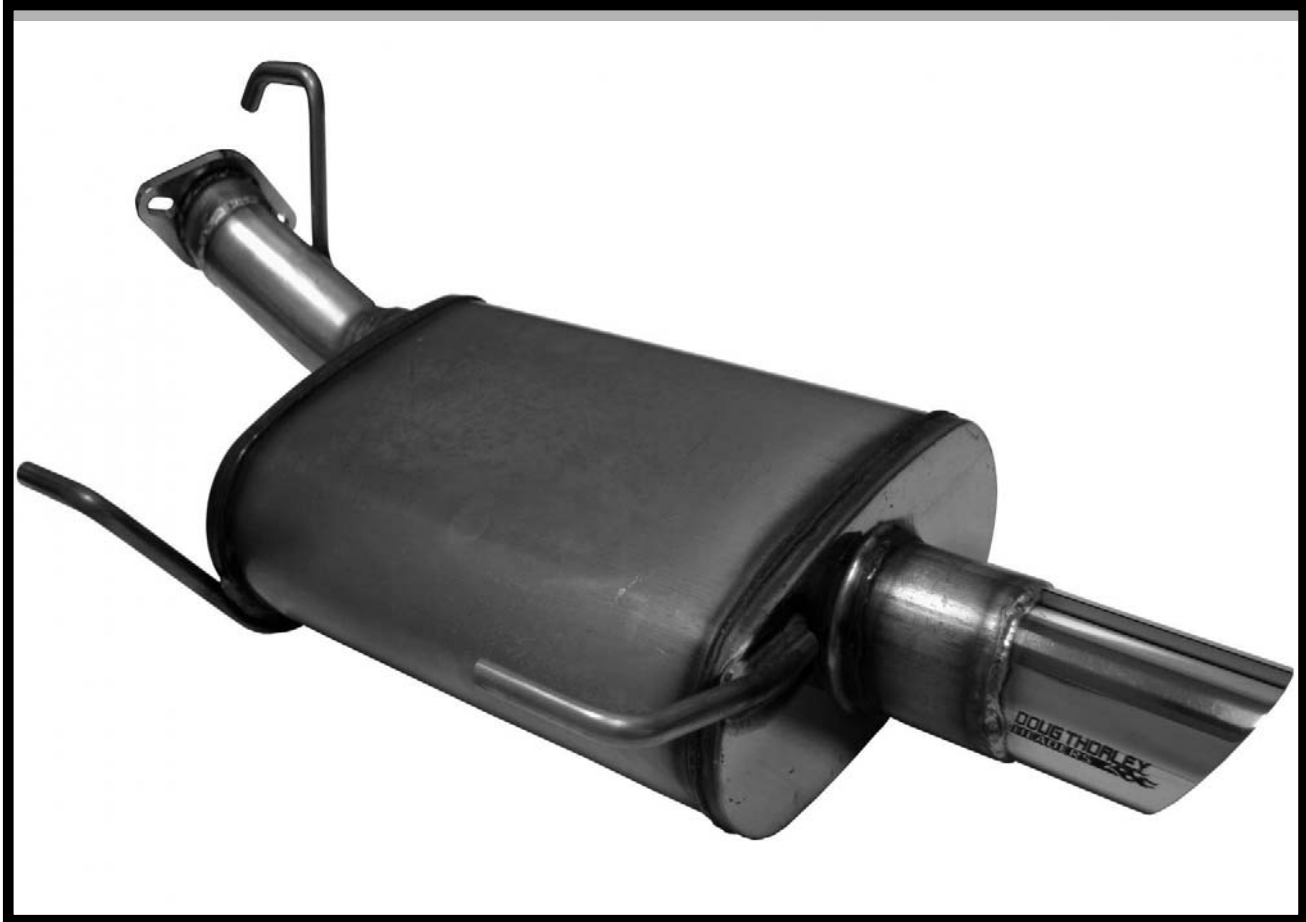

PARTS INCLUDED

Ref.	Part Number	Description	Qty
1)	00-901-02407	Axle Back Assembly	1

TOOLS REQUIRED

Ref.	Description	Ref.	Description
1)	3/8" Drive Ratchet and Extensions	3)	14mm Wrench
2)	14mm Socket	4)	WD40 or Equivalent

83207

AXLE BACK SYSTEM

2011 NISSAN JUKE, 1.6L

INSTALLATION INSTRUCTIONS

BEFORE STARTING:

- 1) Gather all appropriate tools and secure a clean work space.
- 2) Read instruction sheet completely. If you have any questions, call our tech. department at (951)371-1744
- 3) Do not cut or modify parts unless instructed to do so.
- 4) Always disconnect the battery when working on your vehicle to avoid any potential problems.
- 5) Your vehicle should be raised to ease installation. A hoist is ideal, however, installation can be accomplished using a floor jack and jack stands. **CAUTION:** Never work on a vehicle that is supported by a jack only.

REMOVAL:

- 1) Starting at the rear of exhaust, spray WD40 or equivalent lubricant on the rubber hangers to allow easy removal of all hanger rods.
- 2) Remove the two nuts retaining the stock axle back exhaust system. Retain factory gasket and Gently pry hangers away from rubber isolators and remove system.

INSTALLATION:

- 1) Slip the new exhaust system and factory gasket in place and loosely fasten nuts.
- 2) Once satisfied with the position, tighten evenly.
- 3) Reconnect battery, start engine and check for any leaks or clearance issues.