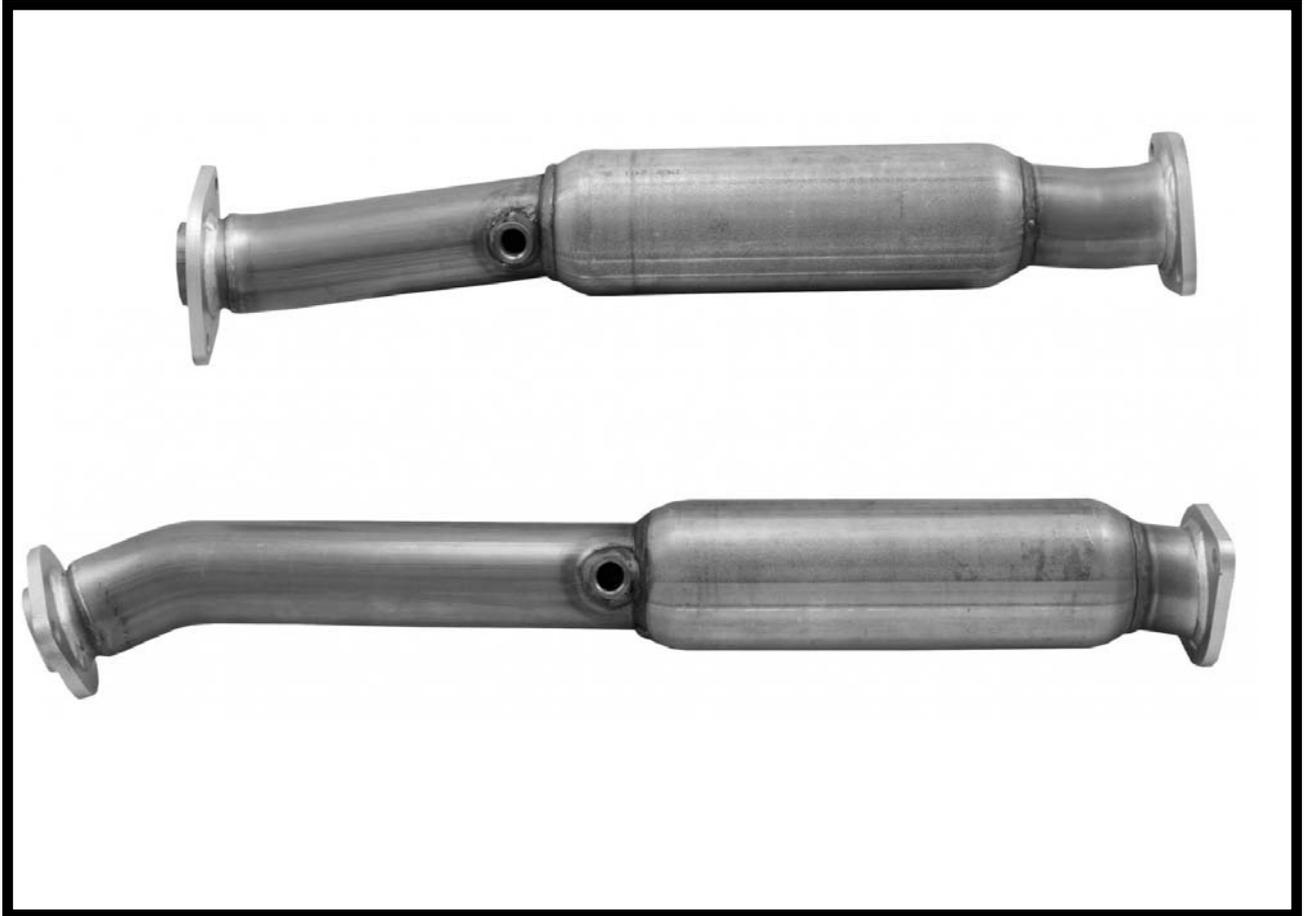


INFINITI QX56/NISSAN PATROL 5.6L  
2012

## PARTS INCLUDED

Ref.	Part Number	Description	Qty
1)	00-901-02552	Driverside B-pipe Assm.	1
2)	00-901-02551	Passenger B-pipe Assm.	1
3)	01-531012530-27	Cap screw, hex flange head bolt, M10-1.25 x 30mm	8
4)	01-7410125-27	Nut, hex flange, M10-1.25	8

## TOOLS REQUIRED

Ref.	Description	Ref.	Description
1)	3/8" Drive Ratchet	5)	14mm Socket
2)	Assorted Extensions	6)	Crescent Wrench
3)	12mm Socket	7)	WD40 or Equvlant
4)	10mm Wrench		

83208

B-PIPE KIT

INFINITI QX56/NISSAN PATROL 5.6L  
2012

---

## INSTALLATION INSTRUCTIONS

### BEFORE STARTING:

- 1) Gather all appropriate tools and secure a clean work space.
- 2) Read instruction sheet completely. If you have any questions, call our tech. department at (951)371-1744.
- 3) Do not cut or modify parts unless instructed to do so.
- 4) Always disconnect the battery when working on your vehicle to avoid any potential problems.
- 5) Your vehicle should be raised to ease installation. A hoist is ideal, however, installation can be accomplished using a floor jack and jack stands.

### REMOVAL / ASSEMBLY:

- 1) Disconnect the positive battery cable.
- 2) Unbolt the stock system at both of the 2-bolt flanges behind the catalytic converters.
- 3) Loosen and remove the four bolts retaining the factory b-pipe to the exhaust manifolds.
- 4) Retain factory gaskets as they will be used with the new pipes.
- 5) Unplug and remove both O2 sensors. You may need to remove the connector from the bracket
- 6) Lower the front of the stock system and slide rearward towards the rear axle.
- 7) Reinstall the factory crush gasket on both pipes and loosely mount the new B-pipes to the exhaust manifolds on both sides.
- 8) Place the rest of the exhaust system back to it's factory location
- 9) Mate the factory system up to the new B-pipes and reinstall factory gaskets.
- 10) Once satisfied with the fitment, you may tighten everything up as a unit.
- 11) reinstall the two O2 sensors into the new pipes and plug them into the harness.
- 12) Reconnect battery, start vehicle, check for leaks and components that may be close to your new pipes, wires, etc.